

DECLARATION

Thanks for purchasing our Electronic Speed Controller (ESC), High power system for RC models can be very dangerous, so please read this manual carefully. In that we have no control over the correct use, installation, application, or maintenance of our products, no liability shall be assumed nor accepted for any damages, losses or costs resulting from the use of the product. Any claims arising from the operating, failure or malfunctioning etc. will be denied. We assume no liability for personal injury, property damage or consequential damages resulting from our products or workmanship. As far as is legally permitted, the obligation to compensation is limited to the invoice amount of the affected product.

User Manual

Brushless Speed Controller
Platinum V3 (50A / 100A)

HW-SM008DUL-20140213

FEATURES

- High-performance microprocessor with the operating frequency up to 50MHz brings excellent compatibility (with most motors in the market) and high driving efficiency.
- The maximum motor speed can reach 210000 RPM (for 2-poles), 70000 RPM (for 6-poles) and 35000 RPM (for 12-poles).
- Multiple flight modes: Airplane Fixed Wing / Heli Governor Off / Heli Governor (EIF) / Heli Governor Store.
- Adjustable throttle range, compatible with various transmitters. It brings smooth, soft & linear speed adjustment and rapid throttle response.
- Microprocessor powered by independent DC regulator has better anti-interference performance, which greatly reduces the risk of losing control.
- Built-in high-efficient & high-power (switch mode) BEC can make the output voltage switched among 5.2V / 6.0V / 7.4V / 8.4V.

(For the specific output voltage, please refer to the parameter list.)

Brand new governor program, easy to operate; and its excellent speed-governing effect can make big rotor blades more stable even under rapid load change.

• "Restart in auto rotation" can manually interrupt the auto rotation and quickly restart the motor to avoid crashes caused by incorrect operations.

• Independent output port for RPM (that is: motor speed) signals.

• Compatible LCD program box (optional accessory), its simple and visual interface allows users to set/revise all the ESC parameters easily.

(For detailed information, please refer to User Manual of LCD Program Box.)

• Upgradeable firmware, you can upgrade the ESC after connecting it to a PC via the USB cable on the program box.


• The independent port, for connecting the program box and setting parameters, can also be the output port of the running status data of the ESC. When coordinating with the data transmission module, it can make the real-time data monitoring and logging possible.

• Multiple protection features including input voltage abnormality protection / low-voltage cutoff protection / throttle signal loss protection effectively prolong the service life of the ESC.

SPECIFICATIONS

Model	Platinum-100A-V3	Platinum-50A-V3
Main Application	480-550 heli (425-550mm blade)	450&450L heli (325-380mm blade)
Battery Count	2-6S Lipo, 5.2V-25.2V	2-6S Lipo, 5.2V-25.2V
Cont. / Burst Current	100A /150A (burst in 10 sec)	50A /75A (burst in 10 sec)
BEC Output	Switch Mode BEC, 6.0V / 7.4V / 8.4V, Cont.: 10A, Burst: 25A BEC has the cut-through protection (which means the battery voltage won't get through to the receiver if the BEC is accidentally damaged)	Switch Mode BEC, 5.2V / 6.0V / 7.4V Cont.: 7A, Burst: 15A
Input / Output Wire	Input: 12AWG / Output: 12AWG	Input: 14AWG / Output: 14AWG
Weight/Size	104g / 70mm x 35mm x 21mm (W/O Fan) 110g / 70mm x 35mm x 32mm (With Fan)	49g / 48mm x 30mm x 15.5mm

WIRING DIAGRAM

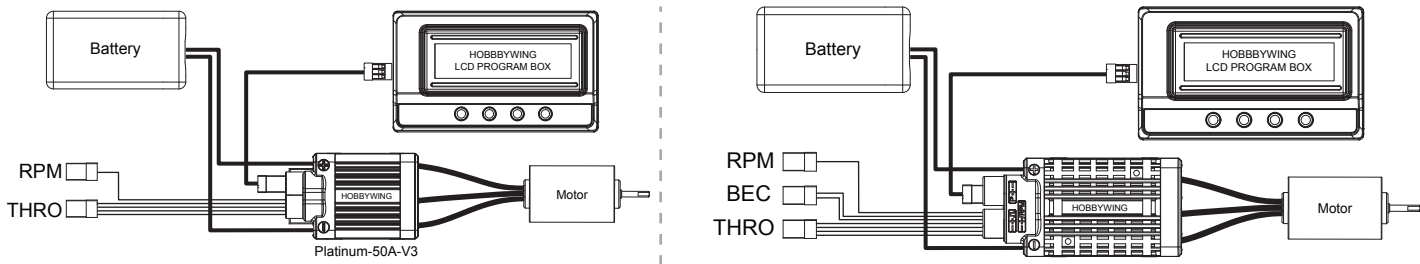

Platinum-50A-V3:

- The tricolor (WRB) cable here is the throttle cable (WHITE: throttle signal wire, RED: BEC output wire, Black: ground wire);
- The thin Orange wire is for RPM signal output;
- The 3-pin port (marked with + P) is an independent port for parameter setting; it can connect the LCD Program Box, or be the output port of running status data of the ESC.

Platinum-100A-V3:

- The tricolor (WRB) cable here is the throttle cable (WHITE: throttle signal wire, RED: BEC output wire, BLACK: ground wire);
- The bicolor (RB) cable here is the BEC cable (RED: BEC output wire, BLACK: ground wire);
- Hence, there are 2 Black wires & 2 Red wires are connected in parallel to the output end of the BEC to make the higher current get through;
- The thin Orange wire is for RPM signal output;
- The 3-pin port (marked with + P) is an independent port for parameter setting; it can connect LCD Program Box, or be the output port of the ESC running status data. 2 pins corresponding to "+" & "-" in the program port are also connected to the output end of the built-in BEC, so that it can power the cooling fan of the ESC.

1) When set as "LiPo battery", the ESC will automatically calculate the cutoff threshold of the battery pack according to the amount of LiPo cells. The low / middle / high cutoff voltage per cell is 2.85V / 3.15V / 3.30V. For example, when using a 3S LiPo, if set the cutoff voltage as "middle", the cutoff threshold of this battery pack should be 3.15x3=9.45V.

2) When set as "NiMH battery", then the low / middle / high cutoff voltage is 50% / 62.5% / 75% of the initial input voltage (at boot/startup up). For example, when using a 6-cell NiMH battery pack, the voltage at starting up is 1.44x6=8.64V, and if set the cutoff threshold as "low", the cutoff threshold of this battery pack should be 8.64x50%=4.3V.

3) When set as "Customized: 2.8V~25.2V", the cutoff threshold of the battery pack can be precisely set (the precision can reach 0.1V). But you need a LCD program box (optional accessory) or USB cable on the LCD program box to connect the ESC to a PC, then set relevant parameters via a special program (Hobbywing USB Link Software).

5. Flight Mode: Airplane Fixed Wing / Heli Governor Off / *Heli Governor (EIF) / Heli Governor Store

1) **Airplane Fixed Wing:** The motor starts to spin at 5% throttle, then speeds up quickly and reaches the full speed from standstill in 300us. In this mode, the ESC will be enforced to set the "Auto Rotation Restart Time" to "OFF".

2) **Heli Governor Off:** When the motor starts at 5% throttle, the startup is very soft and it takes 11 seconds to reach the full speed from standstill. In this mode, if the transmitter is in NORMAL state, then usually the throttle curve is a slash (the start point is the lowest point / 0% throttle, the end point is the highest point / 100% throttle of the throttle range. And this throttle curve is often used by beginners). As the start point is only 5% of the full throttle, the motor rotates slowly that greatly reduces psychological pressure for beginners, so pilots can select this mode for basic practices like "frog leap". In this mode, the ESC will automatically set the "Auto Rotation Restart Time" to "OFF".

3) **Heli Governor (EIF) & Heli Governor Store:** The motor only starts at 40% (or above) throttle (in governor mode, the motor won't start when the throttle value is within 0%-40%); its startup is very soft and needs 11 seconds to reach the full speed from standstill. Besides, it has speed-governing function (works at 40%-100% throttle). As the motor rotates quickly in "governor" mode, so it isn't suitable for beginner anymore but experienced pilots. In these two modes, the setting about "Auto Rotation Restart Time" comes into effect (please refer to "Auto Rotation Restart Time" for more information).

4) **Heli Governor (EIF) & Heli Governor Store** have different ways of storing target rev data. In "Governor Store" mode, the data are saved into the FLASH of the microprocessor (and the data won't disappear after powered off); while in "Governor (EIF)" mode, the data of the nominal target rev are saved into the RAM of the microprocessor (and the data will disappear after powered off).

• In "Governor (EIF)" mode, the ESC will automatically start the RPM standardization & regain the target rev data after powered on.

• In "Governor Store" mode, if it needs to re-standardize the target RPM, pilots must modify and save the flight mode as any option except "Heli Governor Store" first (without restarting the ESC at this moment), then modify and save it as "Heli Governor Store"; the ESC will enter the RPM standardization and regain the target RPM data after it's powered on. After the first activation of the "speed-governing" function or changed accessories (like motor, battery cells amount, gear and different type of main/big rotor blades) on the plane, pilots need to standardize the RPM again next time.

Here we suggest pilots take the "Governor Store" mode as their first option to avoid standardizing rev every time.

a) **RPM standardization in "Governor (EIF)" mode:** when the throttle value switches to over 40% from 0%, the motor starts in a super soft way and accelerates slowly; it completes RPM standardization in 11 seconds and then enters the "governor" mode. After changed batteries, the ESC will standardize the RPM again.

b) **RPM standardization in "Governor Store" mode:** when the throttle value switches to over 40% from 0%, the motor starts in a super soft way and accelerates slowly; it completes RPM standardization in 11 seconds and then enters the "governor" mode. After flight, please move the transmitter throttle stick to the bottom position, the motor stops spinning and the ESC will save the standardized (target) RPM into the FLASH. After changed batteries, the ESC will read the target RPM from the FLASH, so there is no need to standardize the rev again.

c) **Example for RPM Standardization:**

In this example, we take the neutral point (50%) of the throttle stick as reference points for standardizing RPM.

• Set the throttle curve (throttle value at the neutral point=50%) & pitch curve (the pitch at the neutral point is 0) in "NORMAL" mode, and keep the throttle HOLD switch "locked" to ensure safety.

• Connect the fully charged battery to the ESC, let the ESC complete the initialization, then move the transmitter throttle stick to the neutral point (here the throttle value at the neutral point is 50% and the pitch of main rotor blades is 0 degree), and then "unlock" the throttle HOLD switch; the motor will start from standstill in a super soft way, accelerate slowly and completes the target rev standardization in 11 seconds later.

• Trial flight. If the target rev is too low, then raise the throttle curve; if the target rev is too high, and then lower the throttle

curve. E.g. set the throttle curve in IDLE1 / IDLE2 / IDLE3 mode to 65% / 75% / 85% respectively to experience different RPM, and then adjust the value according to the actual situation or preference.

5) As the battery voltage decreases & the pitch of main rotor blades varies in flight, so we recommend setting the throttle curve between 60%~85% (here we strongly suggest not set the value exceeds 85%) on the transmitter to guarantee the speed-governing effect and sufficient compensating rotor to keep the motor's constant speed. If still can't reach that target rev when the throttle value exceeds 85%, please change the motor pinion.

6) For guaranteeing the speed-governing effect, we strongly recommend setting the PWM frequency as 32 kHz.

7. **Autoration Restart Time:** Off / 5s / *10s / 15s / 30s / 90s.

This parameter is only used in "Governor (EIF)" and "Governor Store" modes, and works when the throttle value is within 5%~40%.

During the period of auto rotating (to land), pilots still have the chance to cancel the operation by interrupting the process and restarting the motor quickly. E.g. when set the parameter to 10 seconds, enabling the throttle HOLD switch (to activate the throttle protection) in flight, the motor will cut off the output and let the helicopter land. While, if you want to end this process immediately, then you need to "unlock" the HOLD switch (to exit the throttle protection) and increase the throttle value to over 40%, and the ESC will temporarily switch the acceleration time to 1.5 seconds (that is: it reaches the full speed from standstill in 1.5s) and output power quickly. This action protects the helicopter from crashing caused by the motor's slow acceleration. However, if "lock" the throttle HOLD switch over 10 seconds, the ESC will still output power slowly at a super soft acceleration rate (that means it will take 11s to reach the full speed from standstill) even if you "unlock" the throttle HOLD switch and increase the throttle value promptly.

Security Warning: For safety, please pay attention to the following points.

• When the landing process ends early and the helicopter gets back to ground before the "autorotation restart time", it's prohibited to "unlock" the throttle HOLD switch before disconnecting the battery. Otherwise, the helicopter may rotate and accelerate to a high speed in 1.5s and cause accidents. E.g., if "unlock" the throttle HOLD switch in the "Auto rotation restart time" with the helicopter is still in "IDLE" mode, main rotor blades will spin rapidly and the helicopter may drift and tilt even on the ground.

• If switch the flight mode from "IDLE" to "NORMAL" and move the throttle stick to the bottom position (0% throttle) or "lock" the "Throttle Cut" switch on the transmitter, main rotor blades will not rotate even if you accidentally "unlocked" the throttle HOLD switch.

• In "governor" mode, if set "Auto Rotation Restart Time" to "Off", the motor will always restart at the super soft acceleration rate (it takes 11 seconds to reach the full speed from standstill). Please attention!

7. **Advanced Timing:** 0deg / 4deg / 8deg / 12deg / *15deg / 18deg / 22deg / 26deg / 30deg / Customized: 0deg~30deg, step: 1 deg.

In general, the low timing works fine for most motors. While as great differences exist among motors, so please try different timing(s) to get the best driving effect. For increasing the speed, you can set the timing higher. After the timing adjustment, we recommend having a trial on the ground first, and then fly in the sky.

8. **PWM Frequency:** 8KHz / 16KHz / 24KHz / *32KHz

The rise of PWM frequency can make the motor driving smoother and the noise lower; certainly, this will bring more switching loss for the MOSFET & more heat to the ESC.

9. **BEC Voltage:** *5.2V / 6.0V / 7.4V / 8.4V

For Platinum-50A-V3 ESCs, the BEC output voltage is selectable among 5.2V / 6.0V / 7.4V; and the actual output will be 7.4V even if you selected 8.4V as the nominal output.

For Platinum-100A-V3 ESCs, the BEC output voltage is selectable among 6.0V / 7.4V / 8.4V; but the actual output will be 6.0V even if you selected 5.2V as the nominal output.

10. **LiPo Cells:** "Auto calculate" / 1 cell / 2 cells / 3 cells / 4 cells / 5 cells / 6 cells

The parameter is valid only when the battery pack is LiPo. After powered on, the ESC will make the motor beep the amount of cells in your LiPo pack according to auto-detection or cell count manually set.

For Platinum 50A/100A V3 ESCs, the range which can be auto-calculated or manually set is 2~6S; if exceeds, the ESC will warn.

BEGIN TO USE A NEW BRUSHLESS ESC

Before using a new ESC, you need to check all the connections to make sure they are correct and reliable before connecting the ESC to the battery. When ensured everything is ok, then start the ESC in the following sequence:

1. Move the throttle stick to the bottom position (throttle value=0%), then turn on the transmitter;

2. Connect the battery pack to the ESC, then the ESC starts self-test; the motor issues "2 123" indicating the system is powered on, and N short "beeps" indicating the amount of LiPo cells of the battery pack, then a long "beep"—"indicating the self-test is completed successfully and the system is ready to fly.

• If no response is received, please check the battery and battery connections to ensure they are ok and reliable.

PARAMETERS PROGRAMMING/SETTING VIA THE TRANSMITTER

4 steps to set parameters via the throttle stick:

I. enter "programming" mode;

II. select items(s) / parameters under item(s);

III. select option(s) / parameters under item(s);

IV. exit 'setting'.

I. Enter "Programming / Setting" Mode

1. Turn on the transmitter, move the throttle stick to the top position (full throttle);

2. Connect battery to the ESC, then the motor emits "2 123" indicating the ESC is powered on normally.

3. 2 seconds later, the motor emits two short "beep-beep";

4. 5 seconds later, the motor emits "2 56712" indicating it's already entered the "programming" mode.

II. Select Items

After entered the "programming" mode, you can hear 12 sets of tone repeat sequentially. Move the throttle stick to the bottom position in 3 seconds after the motor emitted certain set of tone, and then you enter the corresponding item.

1. Brake (1 short) "B"

2. Battery Type (2 short) "BB"

3. Cutoff (3 short) "BBB"

4. Low-voltage Cutoff Threshold (4 short) "BBBB"

5. Flight Mode (1 long) "B—"

6. Auto Rotation Restart Time (1 long & 1 short) "B—B"

7. Timing (1 long & 2 short) "B—BB"

8. PWM Frequency (1 long & 3 short) "B—BBB"

9. BEC Voltage (1 long & 4 short) "B—BBBB"

10. LiPo Cells (2 long) "B—B—"

11. Reset to Factory Default (3 long & 1 short) "B—B—B—B"

12. Exit (3 long & 2 short) "B—B—B—BB"

Note: as 1 long "Beep"—"equals to 5 short "beep"; e.g. in step II "Select Items", 1 long & 1 short ("Beep—Beep") represents option 6.

III. Select Options / Parameter Values

The motor beeps in loops, move the throttle stick to the top position when heard some "beep(s)" tone indicating you selected its corresponding option value; then the motor will sound "2 1515" means the value has been saved. (And if you don't want to set other items but quickly exit 'setting', please move the throttle stick to the bottom position in 3 seconds; while if you still want to set other items, please wait for returning to Step II and choose other items.

(** in the form below indicate factory defaults)

Item	Option	1 short beep	2 short beeps	3 short beeps	4 short beeps	5 1 long beep	6 1 long & 1 short beep	7 1 long & 2 short beep	8 1 long & 3 short beep	9 1 long & 4 short beep
1. Brake	*Off	Soft	Hard	Very hard						
2. Battery type	*LiPo	NiMH								
3. Cutoff mode	*Soft cut	Hard cut								
4. Low-voltage Threshold	Off	Low	*Middle	High						
5. Flight mode	Airplane Fixed Wing	Heli Governor Off	*Heli Governor (EIF)	Heli Governor Store						
6. Auto rotation restart time	Off	5s	*10s	15s	30s	90s				
7. Timing (degree)	0 deg.	4 deg.	8 deg.	12 deg.	*15 deg.	18 deg.	22 deg.	26 deg.	30 deg.	
8. PWM frequency	8KHz	16KHz	24KHz	*32KHz						
9. BEC output	*5.2V	6V	7.4V	8.4V						
10. LiPo cells	*Auto Calculate	1 cell	2 cells	3 cells	4 cells	5 cells	6 cells			

IV. Exit "Setting"

Two ways to exit "setting" mode:

a) In Step III, after heard the special tone "2 1515" while selecting optional values, move the throttle stick to the bottom position in 2 seconds, then you exit 'setting'.

b) After heard 3 long & 2 short beeps which represent item 12 while selecting options in Step II, move the throttle stick to the bottom position in 3 seconds, then you exit 'setting'.

Note: After revised ESC parameters via the transmitter throttle stick or program card/box, please save those settings and exit; then the motor emits 5 long "beep—" and 5 seconds later you can restart the ESC.

ESC PROGRAMMING SAMPLE

In the example below, it set the "flight mode" to "Heli Governor Off", that is the 2nd parameter of item 5.

I. Enter "programming" mode: Move the throttle stick to the top position and then turn on the transmitter, connect ESC to battery, the motor emits "2 123" indicating it's normally powered on. 2 seconds later, it emits "beep-beep—" and then 5 seconds later it emits "2 56712" which indicates it's already entered the "programming" mode.

II. Select items: motor starts to sound, when heard a long "beep—" (which represent item #5—flight mode), move the throttle stick to the bottom position, then you entered this item

III. Select Options: motor emits a short "beep—" 3 seconds later, two short "beep-beep"; then move the throttle stick to the top position, and the motor emits "2 1515" indicating it has set to "Heli Governor Off".

IV. Exit "setting": After the 3rd step completed, move the throttle to the bottom position again in 2 seconds.

TROUBLESHOOTING

Trouble	Cause	Solution
After powered on, the motor doesn't rotate and there is no sound emitted.	Poor connection between power connectors.	Re-plug or change the connectors.
After powered on, the motor doesn't spin, but emits the warning tone "beep-beep, beep-beep, beep-beep" (the interval between each group of "beep-beep" is 1 second).	The battery voltage is abnormal.	Please check the battery voltage.
After powered on, the motor doesn't spin but emits the warning tone "beep-, beep-" (the time interval each "beep-" is 2 seconds).	No signal output from the throttle channel of the receiver.	Please check whether the communication between the transmitter & receiver is normal or not, and if the control wire (that is, Rx wire) has been firmly plugged into the throttle channel in the correct direction.
After powered on, the motor doesn't run but emits "beep-, beep-, beep-, beep-, beep-" (each beep is very short and hurried).	Didn't move the throttle stick to the bottom position or the throttle range is too narrow.	Move the throttle stick to the bottom position or reset the throttle range.
After powered on, the motor doesn't run but emits "beep-beep" then the special tone "2 1515".	Incorrect "Normal / Reverse" direction of the throttle channel. Connected ESC output wires to motor wires in the wrong order.	Please refer to the transmitter's user manual and reset the "Normal / Reverse" direction of the throttle channel. Swap any of two wire connections.
The motor rotates in the wrong direction.	Throttle signal loss protection is activated.	Please check the communication between the transmitter & receiver, and also check the connection between ESC and the receiver.
The motor stops halfway.	Low-voltage cutoff protection is activated.	Charge the battery pack or change a new one.
	Poor wire connections.	Please check the battery connector and the connection between ESC output wires and motor wires.

OUTPUT PORT FOR RPM SIGNALS

Platinum V3 series speed controllers have independent output ports / interfaces for RPM signals, so it can connect to flybarless systems like Mikado V-Bar as RPM signal source. Undoubtedly, this reduces peripheral devices which need to be connected to the flybarless helicopter and simplifies the wiring.

OUTPUT THE REAL-TIME RUNNING STATUS DATA OF THE ESC

Platinum V3 series speed controllers have independent ports for parameter setting, which can also be the output ports of the running status data of the ESCs. When coordinating with the data transmission module, it can make the real-time data monitoring and logging possible.

For more information, please read detailed explanations in "Developer's Guide".

PROGRAMMABLE ITEMS

**In the form below indicate factory defaults.

Item	Option	1	2	3	4	5	6	7	8	9	10
1. Brake	*Off	Soft	Hard	Very hard							
2. Battery Type	*LiPo	NiMH									
3. Cutoff Mode	*Soft cut	Hard cut									
4. Low-voltage Cutoff Threshold	Off	Low	*Middle	High	Customized: 2.8V-25.2V, Step:0.1V						
5. Flight Mode	Airplane Fixed Wing	Heli Governor Off	*Heli Governor (EIF)	Heli Governor Store							
6. Auto Rotation Restart Time	Off	5sec	*10sec	15sec	30sec	90sec					
7. Advanced Timing	0deg	4deg	8deg	12deg	*15deg	18deg	22deg	26deg	30deg	Customized: 0deg-30deg, Step:1deg	
8. PWM Frequency	8KHz	16KHz	24KHz	*32KHz							
9. BEC Voltage	*5.2V	6.0V	7.4V	8.4V							