

JP E-Brake Using illustration:

1. Voltage input : 2S-6S Can tap directly on aircraft batteries Or use an external battery 2S-6S

2. Voltage output: 6V

3. Signal input : Connect remote control receiver brake wheel channel (on/off channel),and set an action.

4. You can setting the percentage on the transmitter to control the brake force. +/-100% is max brake force. Or change setting percentage to +100%/-100% ~ -50% OR (+100% ~ +50%/-100%),or **lower** to reduce the braking power and soften the force.

