


Quick Start Guide

快速操作指南

HT-6A



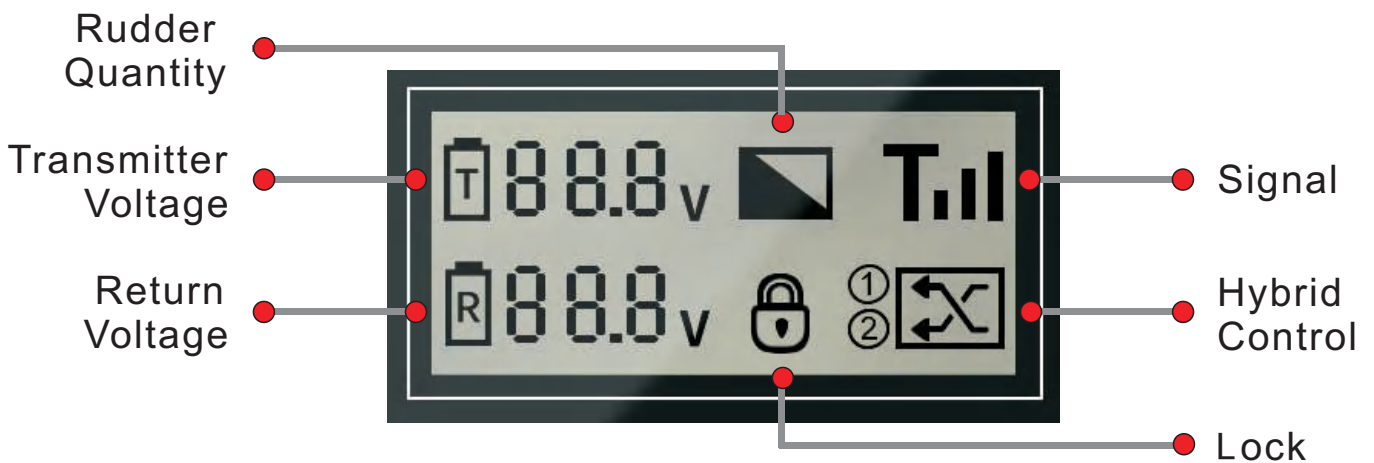

Code matching steps

- A. First, power on the receiver;
- B. Press the receiver 【 BING 】 button again;
- C. Finally, turn on the transmitter power.

※ Receiver light status:

- 【Receiver light flashing slowly without signal】
- 【Receiver light flashing and frequency matching】
- 【Receiver light remains on and connected】

Loss of control protection

1. Function Description

Loss of control protection is a function that protects the throttle channel when the receiver cannot receive a signal; When the receiver receives a signal from the transmitter, the throttle channel will run to the default or set value.

2. Setting method

- A. Before setting up, successfully code the transmitter and receiver;
- B. Turn off the remote control first;
- C. Press and hold the 【Bottom left button】 button first, then turn on the powerswitch of the remote control; The remote control screen will flash and be accompanied by a sound prompt, indicating entering the setting state;
- D. At this point, the throttle channel can be set for runaway protection;
- E. After setting, press the 【Bottom left button】 button again to exit.



【Note: The default factory value for throttle channel runaway protection is the lowest or center point】

【Note: Please do not set the runaway protection value without special usage requirements】

Throttle alarm

If the throttle is not at the lowest value, an alarm will appear. At this time, just pull the throttle lever to the lowest point.

CH1/CH2 Mixing settings

1. Function description

1-channel/2-channel mixing is also commonly known as **【delta wing mixing】** by model aircraft.

2. Setting method

A. Long press the **【mixing control setting key】** on the panel for 1 second; the mixing mode can be switched, and the icon on the display screen will display **【①】** to indicate the 1/2 channel mixing mode.

【Note: The switching of the mixing control mode is carried out through a cycle switching of the mixing control setting key.】

CH2/CH4 Mixing settings

1. Function description

2-channel/4-channel mixing is also commonly known as **【V-shaped tail mixing】** by aircraft models.

2. Setting method

A. Long press the panel [mixing control setting key] for 1 second; you can switch the mixing control mode, and the display icon will display **【②】** to indicate the 2/4 channel mixing control mode

【Note: The switching of the mixing control mode is carried out through a cycle switching of the mixing control setting key.】

Channel size setting

1. Function description

1-way/2-way/4-way can switch the stroke amount of the channel, the default is 100% **【1000-2000】** for the maximum stroke amount, and 70% **【1150-1850】** for the small stroke amount.

2. Setting method

A. Press and hold the remote control's **【Size and Size Rudder button】** for 1 second; you can switch the size of the rudder, and the display will have an icon prompt.

positive and negative

1. Function description

This remote control can set channel 1/channel 2/channel 3/channel 4/forward and reverse directions.

2. Setting method

- A. Press and hold the remote control 【channel forward and reverse key】 for 1 second to enter the setting mode, and there will be a prompt;
- B. Toggle the joystick of the corresponding channel to switch the front and back of the channel 【any direction of the joystick】

【Note: only one channel can be set at a time in the forward and reverse direction】

Lock Instructions

1. Function description

In order to prevent misoperation, the remote control can lock the / fine-tuning key / mixing control key / large and small steering volume keys / channel forward and reverse keys /.

2. Setting method

- A. Long press the 【Lock button】 on the remote control for 1 second to turn on the lock function; there will be an icon prompt on the display; the method of opening/closing the lock is the same.

Automatic standby

1. Function Description

To prevent forgetting to shut down, the remote control will enter the shutdown state after 15 minutes without any operation, and there will be an audio prompt 1 minute before the shutdown.

Battery Description

1. Instructions for use

- A. Use 4 AA batteries, please pay attention to the front and back of the battery;
- B. When the battery is low, the power indicator light will flash and alarm, please replace the battery with a new one immediately;
- C. There is a 2S/2.54 terminal interface reserved in the remote control, which can directly use 2S lithium batteries.

Parameter

Model	HT-6A
Model type	Airplane/Car/Ferry
Channels	6
RF range	2.4GHZ ISM
RF power	≈90MA
Modulation	GFSK
Spread spectrum	FHSS
Reaction speed	PWM≤20MS
RF distance	Ground≈: 300m-800m
Receive sensitivity	-96dbm
Channel resolution	4096
Transmitter voltage	DC 4V-9V
Receiver voltage	DC 4V-9V
Gross weight	365g

Remote control distance is for reference only

Hot RC[®]



FCC ID:


<http://www.hotrc.cn>

Copyright ©2023 Hobby Model Technology co.,ltd

更多介绍视频可扫码进入或直接搜索：HOTRC
For details, please scan the code or search : HOTRC



bilibili

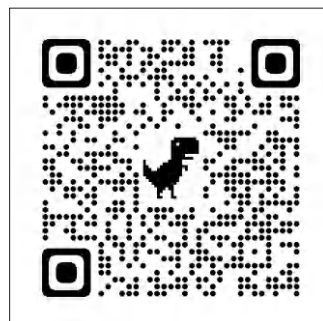

YouTube